





SHORT DUCT COVER OPTION

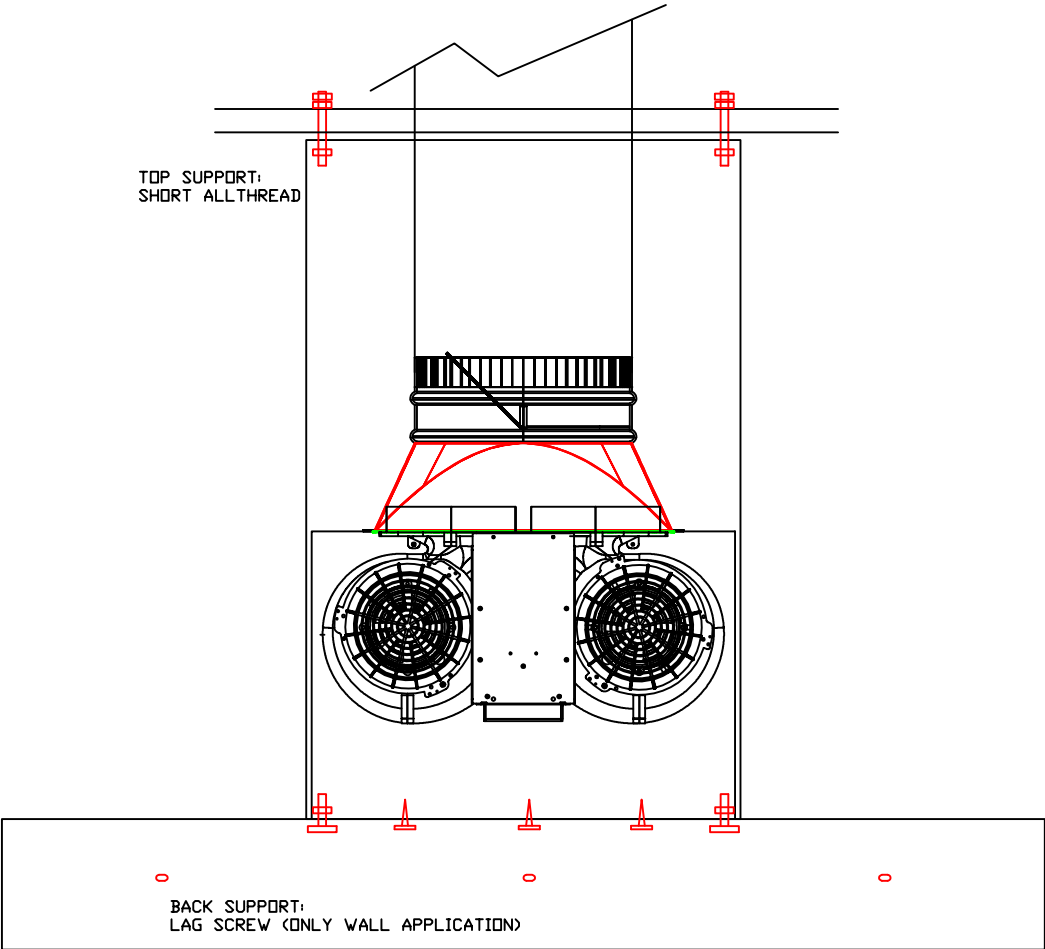


LONG DUCT COVER OPTION

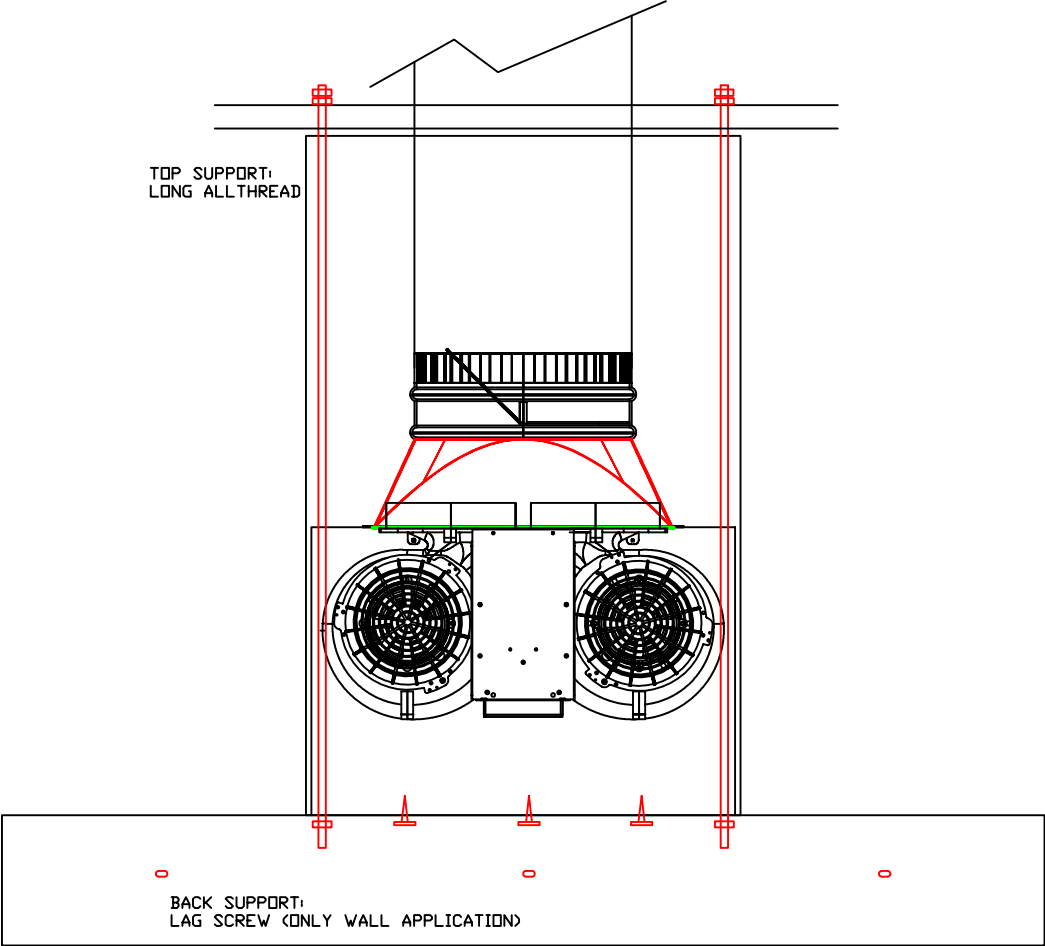


WITH CEILING ACCESS (1)

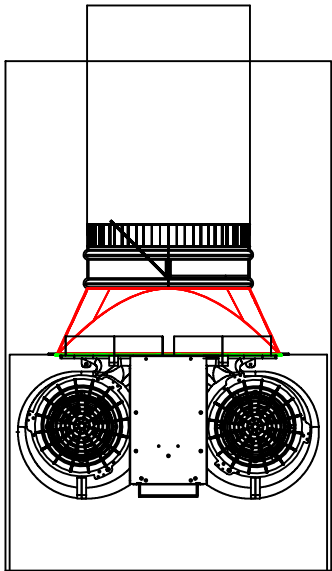


STEP ONE:
INSTALL DUCT WORK ON DC

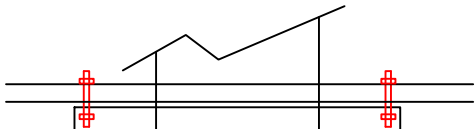

STEP TWO:
INSTALL DC

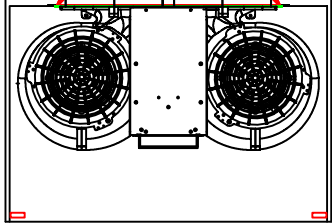



STEP THREE:
BOLT AND SCREW HOOD ON DC

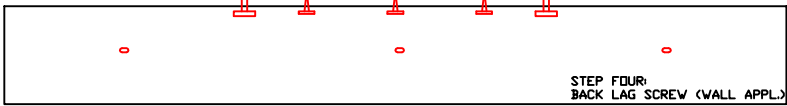

STEP FOUR:
BACK LAG SCREW (WALL APPL.)


SEE PAGE 12 FROM #750351 PRIZER HOODS WALL & ISLAND
HOODS INSTALL FOR CEILING JOISTS REQUIREMENTS

WITH CEILING ACCESS (2)

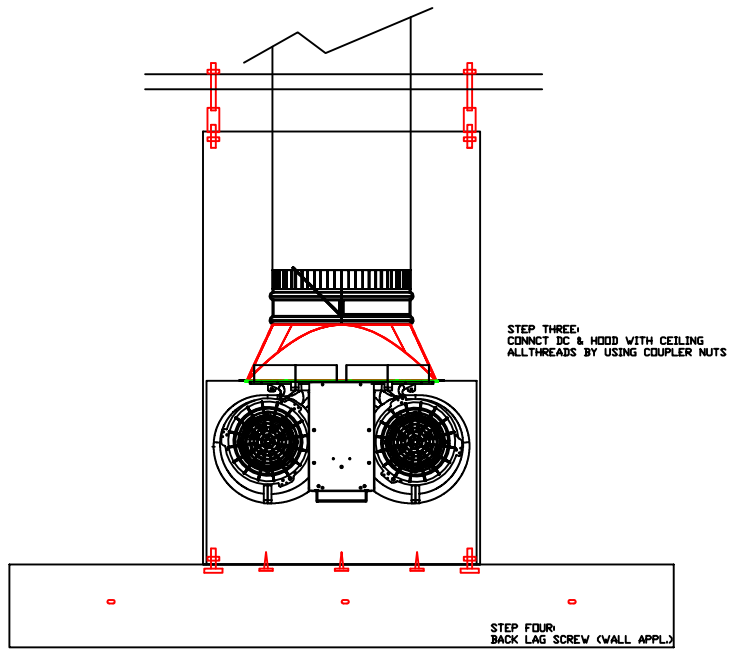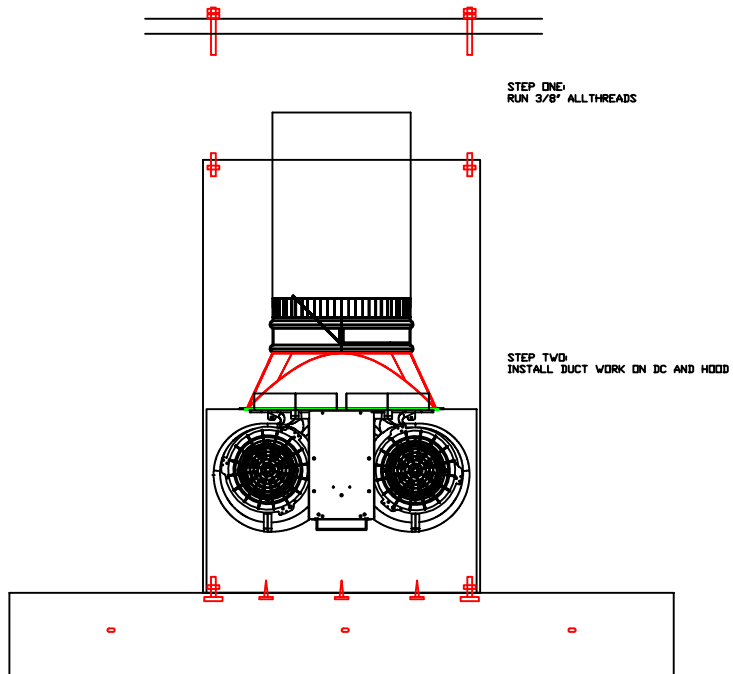


SEE PAGE 12 FROM #750351 PRIZER HOODS WALL & ISLAND
HOODS INSTALL FOR CEILING JOISTS REQUIREMENTS


WITHOUT CEILING ACCESS

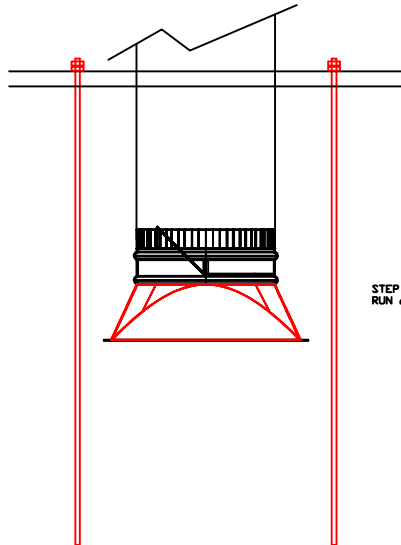

STEP ONE:
RUN ALL-THREADS, DC WORK AND TRANSITION

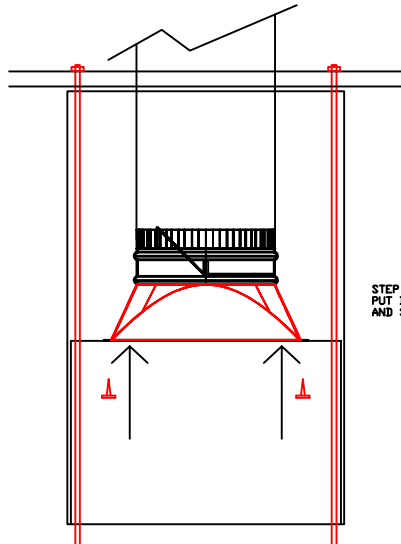


STEP TWO:
PUT DC IN POSITION
AND SCREW ON TRANSITION

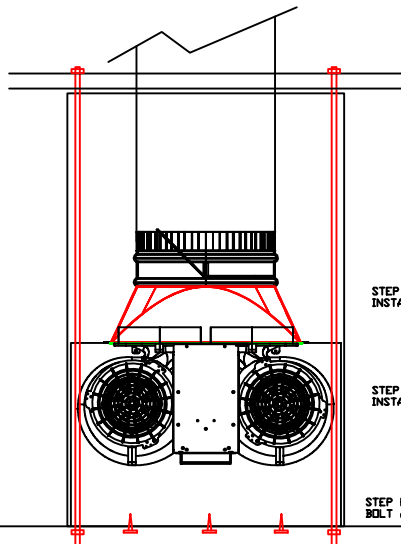

STEP THREE:
INSTALL BLOWER


STEP FOUR:
INSTALL HOOD

STEP FIVE:
BOLT AND SCREW HOOD ON DC

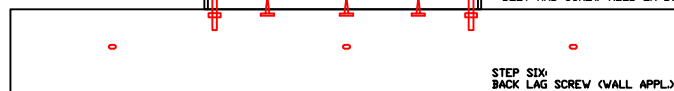

STEP SIX:
BACK LAG SCREW (WALL APPL.)

SEE PAGE 12 FROM #750351 PRIZER HOODS WALL & ISLAND
HOODS INSTALL FOR CEILING JOISTS REQUIREMENTS

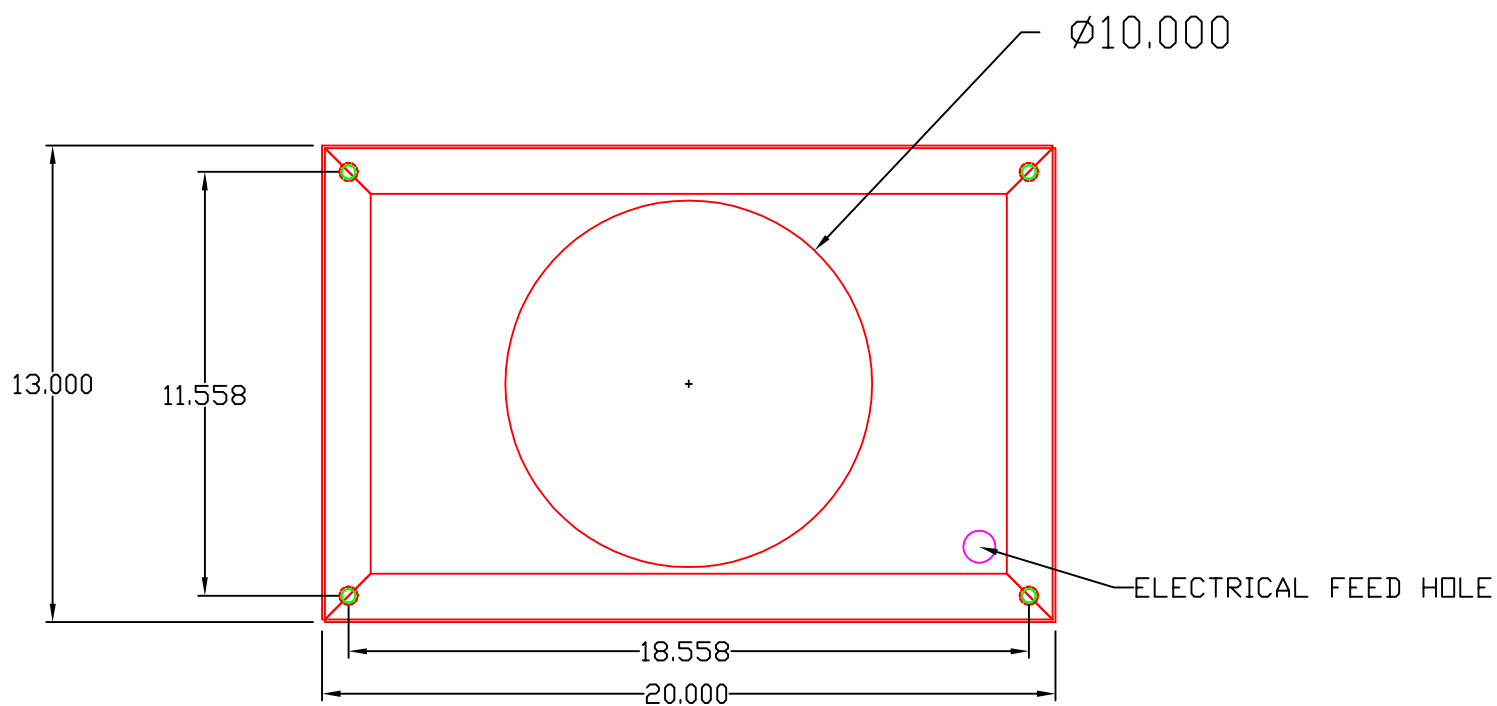

FRONT

MANHATTAN DUCTCOVER FOR 48-60" HOOD

TOP VIEW ALL THREAD HOLE LAYOUT